

Installation Instructions: (09066)

Specification

- 1. Input Voltage: AC220-240V 50/60Hz
- 2. Wattage: 1W
- 3. Power factor: 0.83PF, supply current: 13mA
- 4. Lumens: 60lm.
- 5. Battery installed or replaced: Life PO4 3.2V 150mAh
- 6. Operating environmental temp: 0° to +35°C.
- 7. Recharge time: 24 hours.
- 8. Emergency duration: more than 3 hours.

Important Information

We recommend that luminaires are installed by a qualified electrician ensuring the installation complies with current IEE wiring regulations BS7671:2018 & local building control.

ž

H171

- All tests should be carried out in accordance to EN 50172.2004
- BELL will not accept responsibility for any claims. arising from a poor installation.
- The light source of this luminaire is not replaceable: when the light source reaches end of life, the whole luminaire must be replaced.

Important User Advice


- The ambient room temperature should not exceed 35°C.
- Ensure that there is adequate free air ventilation around the fitting.
- Always switch off mains supply before installing.

This product may contain substances that can be hazardous to the environment if not disposed of properly. Electrical and electronic equipment should never be disposed of with general household waste but must be separated for its correct treatment and recoverv. **XCE**

Where possible recycle your packaging.



Read these instructions before installation and retain for future reference

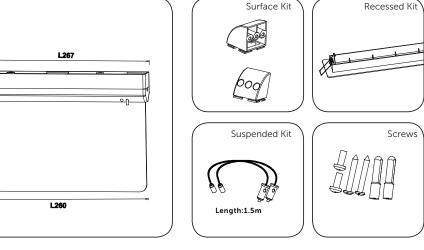

Connection:



 Adjustment *** CN2 For CN2 connector: 1. Maintain mode: short-circuit plug on pin 1,2 2.Nomaintain mode: short-circuit plug on pin 2.3

Use of switch on PCB:

In AC input, Press for 1 second: Timing begins / Press for 3 seconds: LED on, auto test for 5 minutes

Indicator working performance

Normal fitting: green indicator working Battery failure: red indicator flashing. (Flash once every 3 seconds.)

Lighting source failure: red indicator flashing. (Flash twice every 3 seconds).

Auto-Test instructions

After the emergency light is installed:

An automatic test will conduct once monthly for emergency lighting for 10 minutes.

The light will return will return to normal operation after 10 minutes.

 
An automatic test will be conducted once a vear for emergency lighting for 3 hs. The light will return to normal operation after 3 hours

If the emergency duration is less than the specified time the red indicator on the light will flash.

Changing / fixing the legend:

Fix the legend to the transparent blade then place in to the bottom of the light guide (left)

To change the legend use a screwdriver to losen the transparent blade then replace legend (right).



British Electric Lamps Ltd Unit A Foxbridge Way, Normanton Industrial Estate Normanton, West Yorkshire. WF6 1TN


T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk

www.belllighting.co.uk

Technical Helpline +44 (0)1924 893380 www.**belllighting**.co.uk



Read these instructions before installation and retain for future reference. This equipment should be installed by a competent electrician

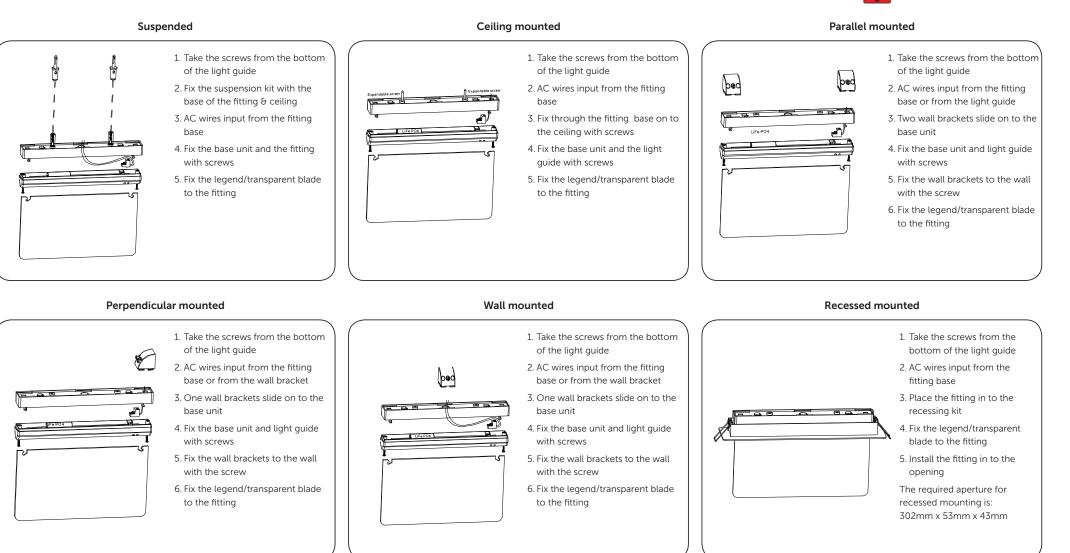

Technical Helpline +44 (0)1924 893380 www.belllighting.co.uk

BELLlighting

T: +44 (0)1924 893380 F: +44 (0)1924 894320 E: sales@belllighting.co.uk

www.belllighting.co.uk

Normanton, West Yorkshire. WF6 1TN

Unit A Foxbridge Way, Normanton Industrial Estate

British Electric Lamps Ltd